


I766 DECT Quick Reference Guide

Front View



Side View

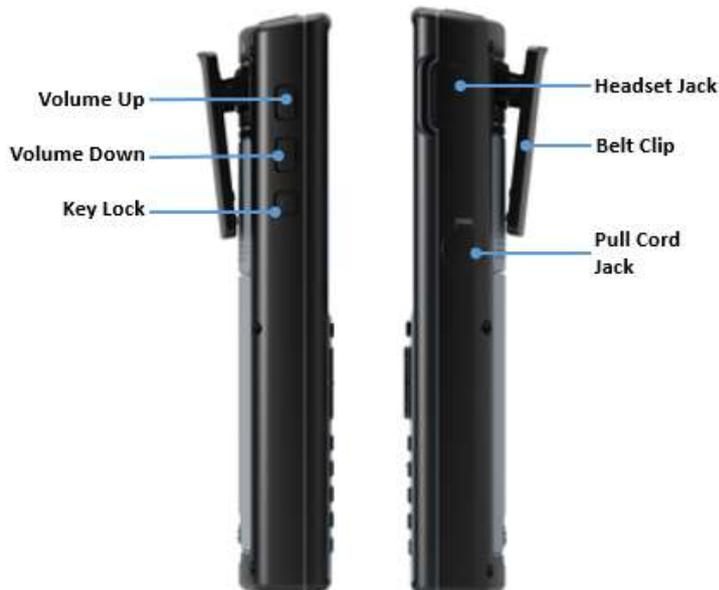

Package Contents:

- I766 Handset
- Battery
- Belt clip
- Pull cord
- This Reference Guide
- Additional Information sheet


To use the I766 for the first time:

- Open the battery lid;
- Remove the plastic strip from the battery contacts
- Close the battery lid;
- Place the I766 on the charger to fully charge the battery

Main Menu Items



Top Line Icons

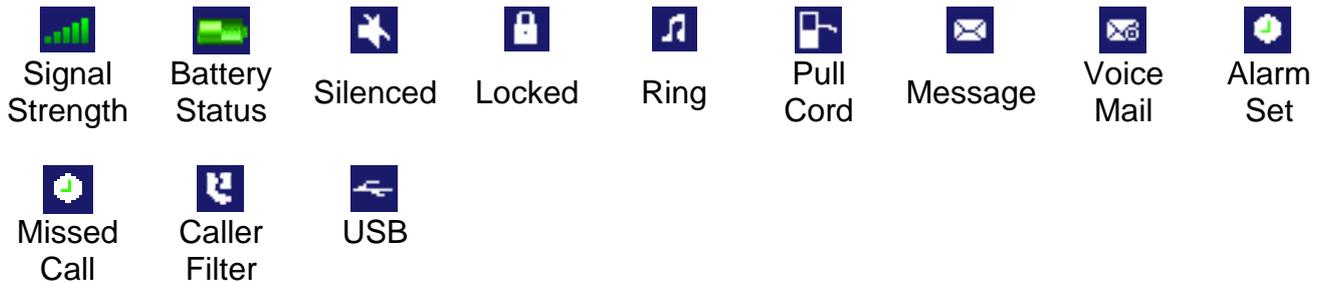

GETTING STARTED

Turning the I766 on and off

Press and hold  for a few seconds.

Activating your phone

When the display of your phone is dark, press any key to activate your phone (phone in **Idle** mode).

Lock/Unlock your phone

In **Idle** mode press  and then  (toggle function) or press "**Key Lock**" on the side of the phone. To unlock your phone press  and then  (toggle function).

Make a call

In **Idle** mode:

1. Press  and then type the number you want to reach. **OR**
2. Press  and then type the number you want to reach (speakerphone call) **OR**
3. Type the number you want to reach and then press  or  **OR**
4. Use a speed dial key (... or ) **OR**
5. Press soft key  or , select the required contact and press soft key , , or .

Answering an incoming call

Press  or, for speakerphone call, .

End a call

Press .

Make an enquiry call

During a call, press  and dial the number of the party you want to consult. Press  to toggle between the two parties. Press  to transfer the call.

Change the volume

During a call, press “**Volume Up**” or “**Volume Down**” on the side of the phone.

Use the Speaker phone

During a call, press ; to de-activate: press  again.

Mute the microphone during a call

Press the soft key . To turn the microphone on again, press the soft key .

Mute the microphone during a call

In **Idle** mode, press and hold  for a few seconds.

Note: You may need to enter your voicemail number in the handset settings first.

Write and send a text message

In **Idle** mode, press , use the navigation keys to select  and press the soft key .

1. Press soft key , then enter the text of your message. **OR**
2. Use the navigation keys to select a stored draft message and press soft key .

Then press soft key , select the type of the message (normal or urgent) and choose the required destination(s). When “message sent” is given in the display your message has been sent successfully.

Assigning a contact to a speed dialling key

In **Idle** mode, press soft key , select the contact you want to assign a speed dialling key and press soft key . Choose  and press soft key . Use the navigation keys to scroll to the appropriate number (2..9) and press soft key .

Make a shortcut

In **Idle** mode, press , use the navigation keys to select  and press soft key . Use the navigation keys to select  (*Shortcuts*). Now you can assign a function to one of the navigation keys or function keys.

Register the handset

In **Idle** mode, press , use the navigation keys to select  and press soft key . Use the navigation keys to select  (*Connectivity*) and press soft key . Use the navigation keys to select  (*Register*) and press soft key .

Enter the requested registration information (contact your System Administrator for this). Wait for the registration to be completed.

Using the menu

In **Idle** mode, press  to access the main menu. Use the navigation keys to go to the required menu, menu tab and menu item. Use soft key  (or press ) to select the chosen menu or menu item/tab. Other soft keys may provide additional options.

To go back one step in the menu or leave altogether, press .

Menu list

1.  **Contacts**
 - *List of contacts*
2.  **Central Directory**
 - *Select required contact by name*
3.  **Calls**
 -  *All Calls*
 -  *Answered Calls*
 -  *Dialled Calls*
 -  *Missed Calls*
4.  **Settings**
 -  *General Settings*
 -  **Silent**
 -  **Time & Date**
 -  **Language**
(Supported: English, Spanish, German, French, Italian, Dutch, Danish, Swedish, Turkish, Polish, Norwegian, Greek & Russian)
 -  **Shortcuts (for the navigation keys)**
 -  **LED Signal**
 - >  **Red LED**
 - >  **Green LED**
 - >  **Yellow LED**
 - >  **Blue LED**
 -  **Security**
 - >  **Phone Lock**
 - >  **Automatic Key Lock**
 - >  **Change PIN**
 - >  **Proxy Password**
 -  **Handset Name**
 -  **RFID**
 -  **Reset Settings**
 -  **Status**
 -  *Sounds Normal & Sounds Silent*
 -  **Incoming Call**
 - >  **Ring Volume**
 - >  **Ring External/Internal/Unknown**
 - >  **Group Ring**
 - >  **Intercom Ring**
 - >  **Emergency Ring**
 - >  **Arb. Ring**
 - >  **Increasing Ring**
 - >  **Vibrator**
 -  **Message Notifications**
 - >  **Notification Volume**
 - >  **Notification**
Normal/Urgent/Emergency
 - >  **Increasing Notification**
 - >  **Vibrator**
 -  **Alerts**
 - >  **Alert Volume**
 - >  **Alert Melody**
 - >  **Increasing Alert**
 - >  **Vibrator**
-  **Settings (continued)**
 -  **Feedback**
 - >  **Key Sound**
 - >  **Confirmation Sound**
 - >  **Coverage Warning**
 - >  **Charger Warning**
 -  **Noise Reduction**
 -  **Display**
 -  **Wallpaper**
 -  **Startup Screen**
 -  **Power Save**
 -  **Charger Backlight**
 -  **Calls**
 -  **Units**
 -  **Answer Mode**
 -  **Caller Filter**
 -  **Emergency Call**
 - >  **Number**
 - >  **Message**
 - >  **SOS Key**
 - >  **Man Down**
 - >  **Pull Cord**
 -  **Voicemail Number**
 -  **Silent Charging**
 -  **Missed Call Time**
 -  **Connectivity**
 -  **Register**
 -  **Deregister**
 -  **Select Network**
 -  **Bluetooth**
 - >  **Enabled/Disabled**
 - >  **Search for Devices**
 - >  **Paired Devices**
5.  **Calendar**
 - *Manage your appointments*
6.  **Accessories**
 -  **Alarms**
 -  **Calculator**
 -  **Stopwatch**
7.  **Messaging**
 -  **Drafts**
 -  **Inbox**
 -  **Sent Messages**
 -  **Settings**